


Unfolding the Manhole Buddy Lifting Trolley before use



Remove locking pin



Undo Velcro strap

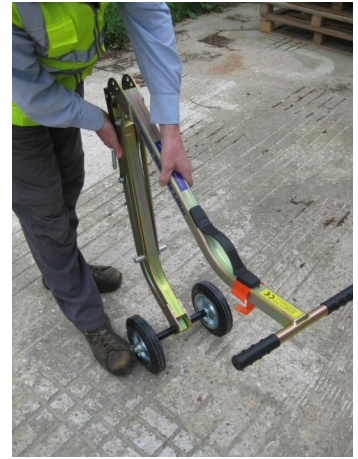

Raise front section



Insert locking pin
(see right for alternatives)



Straight handle (left) is most common configuration.
Cranked handle (right) may be applicable on raised covers or
where the user stands on higher ground near the cover.



Press stay bars inwards
to release front arm



Push front arm
forward ..



... until stay bars are
straight

Before using the Lifting Trolley, check all pins, bolts and clips are in place and secured. Check also for any visible signs of misalignment or damage. **DO NOT** operate damaged equipment.

See overleaf for **Folding Away the Manhole Buddy Lifting Trolley** after use

Repacking the Manhole Buddy Lifting Trolley after use



Raise front arm by lifting stay bars in front of joint



Fold front arm back against frame



Remove locking pin



Fold handle section forward



Refit Velcro strap



Replace locking pin on frame

Take care to avoid pinching or trapping fingers when folding the trolley. Refer to the **Manhole Buddy User Guide** for full operating instructions.